

CAUTION!

Do not disconnect battery while the engine is running as this will damage the alternator.